


MARSDEN

MS-150 Lightweight Floor Scale

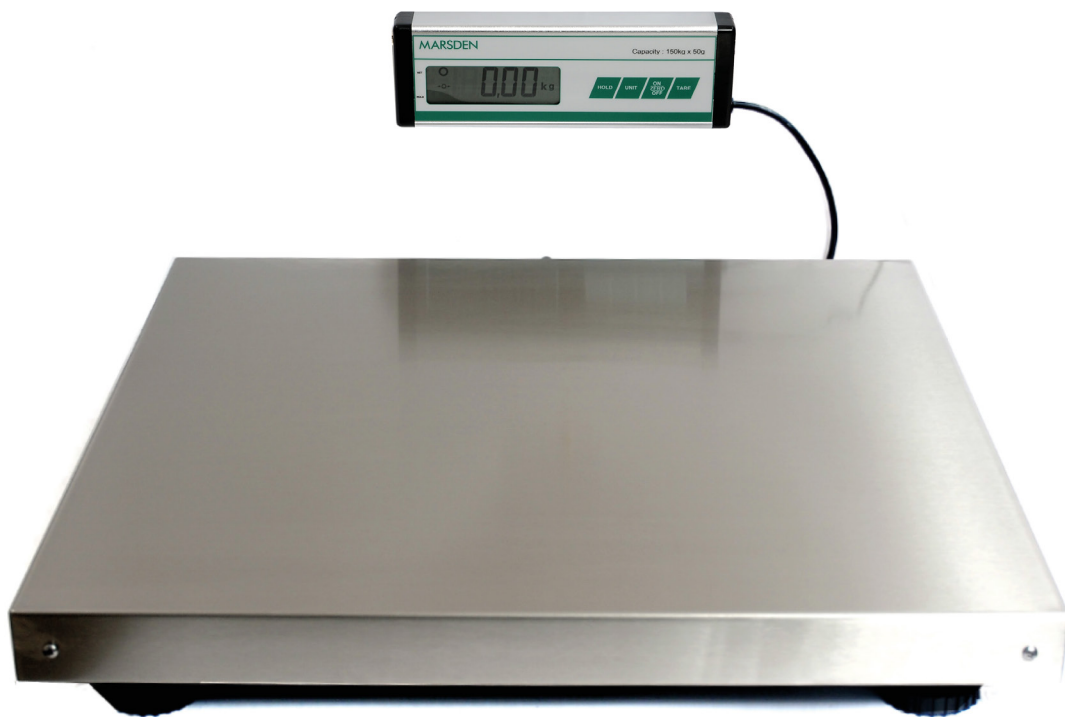


- Stainless steel top plate
- Flexible Indicator
- Crystal clear 1" LCD display
- Weighs in kg or lb
- Easy to use
- 40 hours continuous use

Marsden MS-150:

Lightweight Floor Scale

- Stainless steel top plate
- Flexible Indicator
- Crystal clear 1" LCD display
- Weighs in kg or lb
- Easy to use
- Can be wiped down
- Large general purpose scale
- 40 hours continuous use
- Functions include Tare, Zero and Hold
- Low profile

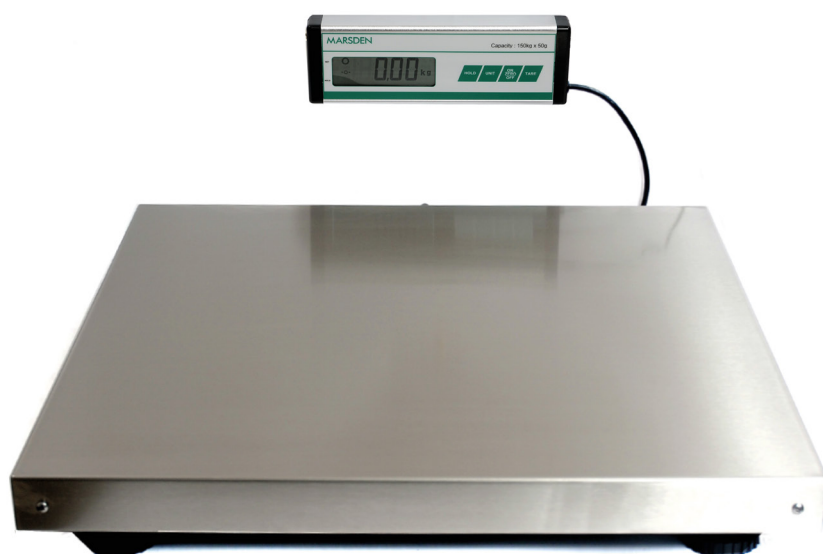

Simplified weighing

The MS-150 floor scale keeps things simple - with a bright display and just five easy to use function buttons, including on/off, tare, zero, etc.

Place your item or items on the stainless steel, wipe-down top plate. Use the Tare function to remove unwanted weight, like a box. They're also unit switchable, so you can weigh in pounds or kilograms.

Portable

The MS-150 has an internal rechargeable battery. This enables the scale to be used wherever you need it, allowing from complete flexibility in your work flow.

An AC adaptor is also supplied so the scales can be powered from the mains if required. This means that the scale can be charged overnight and ready for use the following day.

Flexible Indicator

The indicator on the MS-150 is completely flexible, thanks to its long lead. You can place the scale on a bench or place on the floor, with the indicator mounted on a wall.

Whether you're weighing big barrels or awkwardly shaped pallets, the indicator is always easily visible. Plus, with a wall bracket included, it can be easily mounted for all to see.

Capacity:	150kg	Power Supply:	Mains/rechargeable battery
Graduations:	50g	Battery Life:	40 hours of continuous use
Functions:	Zero, Hold, Tare, Portable	Approvals:	No
Dimensions:	550mm x 550mm x 80mm	Optional Extras:	N/A
Weight of Scale:	14.5kg	Warranty Period:	1 Year